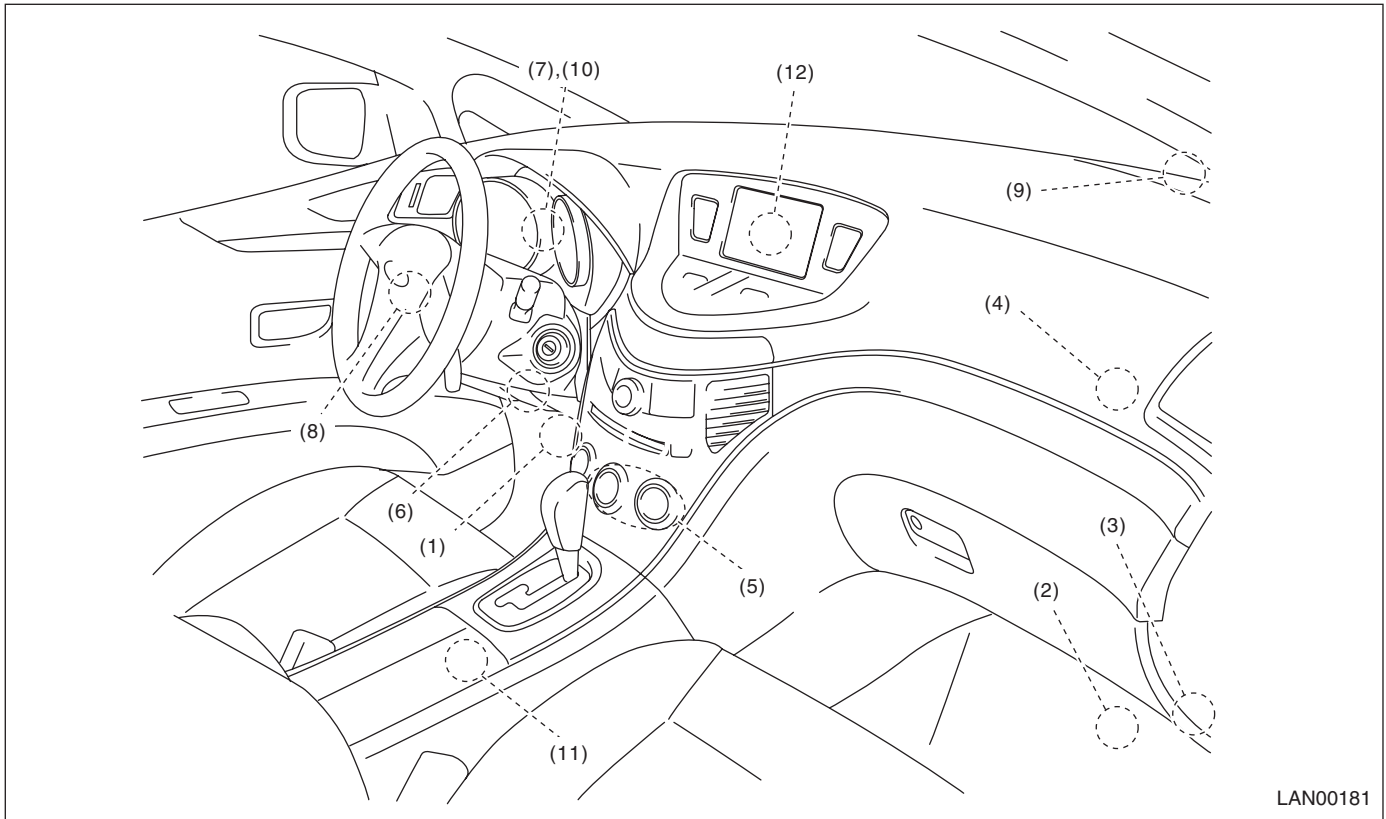


## 4. Electrical Component Location

### A: LOCATION

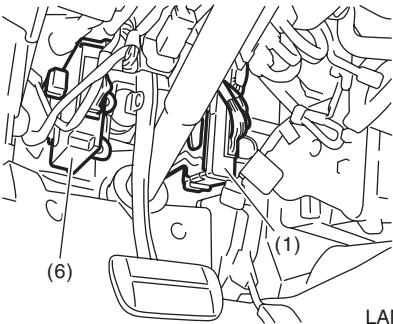
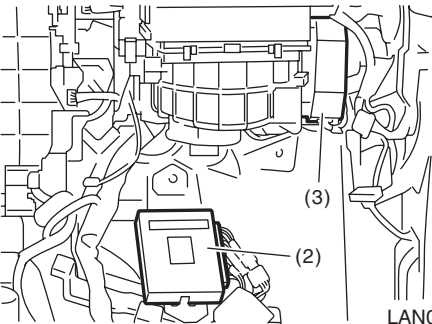
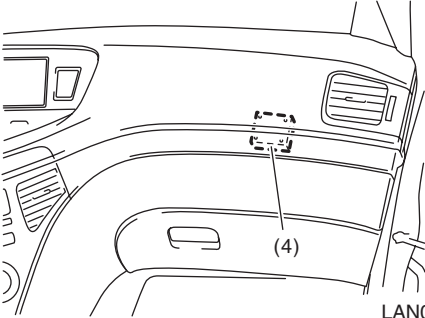
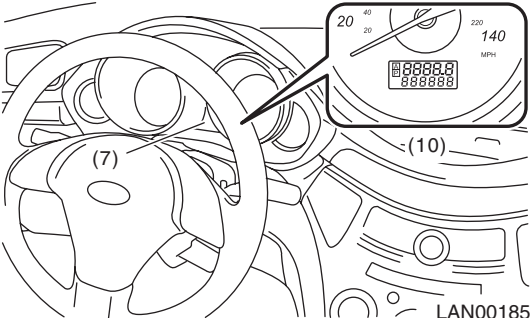
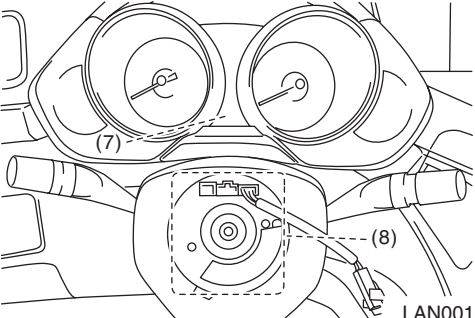
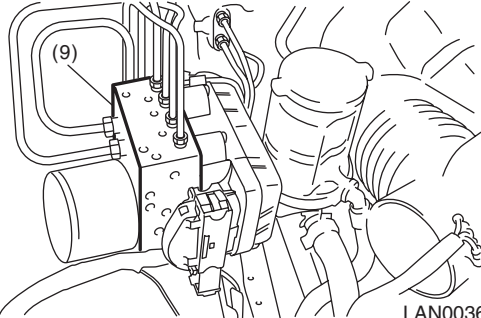
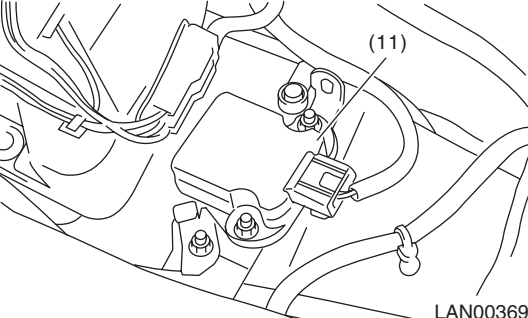


LAN00181

- |  |                                       |   |
|--|---------------------------------------|---|
| (1) Body integrated unit                   | (6) Transmission control module (TCM) | (10) Odo/trip meter                             |
| (2) Engine control module (ECM)            | (7) Combination meter                 | (11) Yaw rate sensor                            |
| (3) Auto A/C control module                | (8) Steering angle sensor             | (12) Center monitor (navigation monitor or MFD) |
| (4) Keyless entry control module (Antenna) | (9) VDCCM&H/U (In engine compartment) |   |
| (5) A/C control panel                      |                                       |   |

Electrical Component Location

LAN SYSTEM (DIAGNOSTICS)

 <p>LAN00182</p>	 <p>LAN00183</p>
 <p>LAN00184</p>	 <p>LAN00185</p>
 <p>LAN00186</p>	 <p>LAN00368</p>
 <p>LAN00369</p>	